


GOJO TFX™ DISPENSER DIMENSIONS


These dimensions apply to GOJO®, PURELL®, PROVON® and MICRELL® brand TFX dispensers.

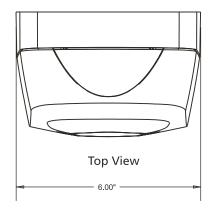

Use the dimensions provided to ensure adequate wall spacing and clearance for the unit.

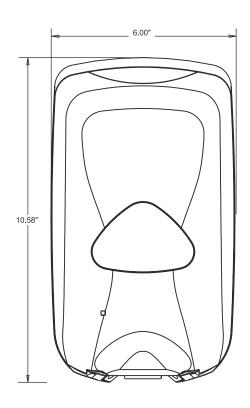

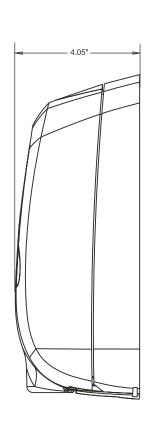

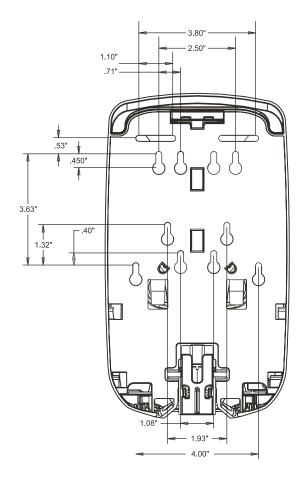

Front View Side View Back View

Touch-Free Dispensing System Instructions

Please carefully read all instructions before installing and using the dispenser.

Installing the Dispenser Do not install in locations where dispenser may be exposed to wet environments, such as showers or areas where walls are washed down.

Tape Installation Use only on smooth, dry surfaces



Install dispenser at least 6" above countertop.

2 Clean installation surface with supplied prep surface to dry for 60 seconds.



Open dispenser by pushing release on bottom of dispenser.



Peel paper off of installation tape located on back of dispenser.



Press dispenser firmly onto mounting surface by applying pressure to the inside of backplate for 15 seconds. Do not load refill for at least 24 hours.

Fastener Installation Use on rough or smooth surfaces



Install dispenser at least 6" above countertop.



Open dispenser by pushing release on bottom of dispenser

3 Using backplate as template, mark and drill 4 center holes using 1/4' spiral masonry drill or 1/4" wood drill. If required, pierce installation tane at installation holes Make sure tape backing remains in place.

4 Install #10 x 1" anchors into the 4 drilled

Insert Type A #10 x 1" screws into installation holes in backplate and through installation tape.



Peel paper off of installation tape, line up screws with anchors, and press firmly into position.



Tighten screws securely, being careful not to overtighten.

 
Battery Installation



Open dispenser by pushing rélease on bottom of dispenser.



Remove two screws securing battery box cover using Phillips head screwdriver.



Use 3 high-quality C-cell alkaline batteries. Do not mix old and new batteries.



Replace battery box cover, being careful not to overtighten screws.



Close dispenser cover. Status light will blink green after closing, indicating that batteries are correctly installed and dispenser is ready to accept refills.

Loading Refill into the Dispenser



dispenser by pushing release on bottom of dispenser.



 
Check that the color of refill collar key matches color key located immediately below status



Insert refill at slight angle into dispenser so nozzle is inside



Fully insert refill down into lock release until refill clicks into place Close dispenser. Prime refill pump by placing hands below dispenser until product is Dispenser Use below.)



To remove refill, press lock release and lift refill up and out of dispenser.

Dispenser Use



- 1. Place palms approximately 2" below dispenser.
- 2. Product will be dispensed within 1 second of sensor activation.
- 3. To receive additional product, remove hands from below dispenser and repeat Step 1.

Cleaning and Maintenance

Clean exterior surfaces of the dispenser using warm water and mild soap. DO NOT USE ABRASIVE CLEANERS. Dry with a soft cloth.

Troubleshooting

No Dispense, Motor Does Not Run

- Hands are not directly beneath sensor
- No refill is loaded
- Incorrect refill is loaded
- · Batteries are not loaded or are loaded incorrectly

No Dispense, Motor Runs

- Refill is empty or is loaded improperly
- Refill pump is not primed

Classifications, per UL 60601-1 uitable for use in the presence of a flammable anesthetic









