

WEB-P

### **Receiving instructions:**

After delivery, remove the packaging from the product. Inspect the product closely to determine whether it sustained damage during transport. If damage is discovered, <u>immediately</u> record a complete description of the damage on the bill of lading. If the product is undamaged, discard the packaging.

### Note:

The end-user is solely responsible for confirming that product design complies with all laws, regulations, codes, and mandatory standards applied where the product is used.

Table of Contents		
Signal Words	2	
Safety Guidelines	2	
WEB-P Exploded Parts Diagram and Bill of Materials		
WEB-W and WEB-W-15 Exploded Parts Diagram and Bill of Materials	3	
Installing Wall-Mounted Units (WEB-W and WEB-W-15)	3	
Using the Barrier System.	. 3	
Limited warranty		

## Signal Words

This manual uses SIGNAL WORDS to indicate the likelihood of personal injuries, as well as the probable seriousness of those injuries, if the product is misused in the ways described. Other signal words call attention to uses of the product likely cause property damage.

The signal words used appear below along with the meaning of each word:

Identifies a hazardous situation which, if not avoided, WILL result in DEATH or SERIOUS INJURY. Use of this signal word is limited to the most extreme DANGER situations.

Identifies a hazardous situation which, if not avoided, COULD result in DEATH or **SERIOUS INJURY.** 

Indicates a hazardous situation which, if not avoided, COULD result in MINOR or MODERATE injury.

NOTICE

Identifies practices likely to result in product/property damage, such as operation that might damage the product.

Before assembling, installing, using, or maintaining this product, read the entire manual. If you do not understand an instruction, ask your supervisor or employer for clarification. Failure to apply the directions in this manual might result in serious personal injury.

# Safety Guidelines

Vestil diligently strives to identify foreseeable hazards associated with the use of its products. However, material handling is inherently dangerous and no manual can address every conceivable risk. The end-user ultimately is responsible for exercising sound judgment at all times.

AWARNING If this product is used improperly or carelessly, the operator and/or bystanders might sustain serious personal injuries or could even be killed. To reduce the likelihood of injury:

• Failure to read and understand the entire manual before assembling, installing, using or servicing the product is a misuse of the product.

• DO not lean against the barrier straps. The barrier system is not anchored to the floor. Applying weight to a strap will cause barrier posts to fall.

• DO NOT modify the product in any way UNLESS you first obtain written approval from Vestil. Unauthorized modifications automatically void the Limited Warranty and might make the product unsafe to use.


 Inspect the product before each use. Confirm that all straps extend and retract smoothly. Straps should also securely attach to receivers on adjacent posts.


• DO NOT use this device UNLESS all product labels (see "Label Placement Diagram") are readable and undamaged.

**NOTICE** Proper use, maintenance, and storage are essential for this product to function properly.

• Always use this product in accordance with the instructions in this manual.

• Keep the product clean & dry.

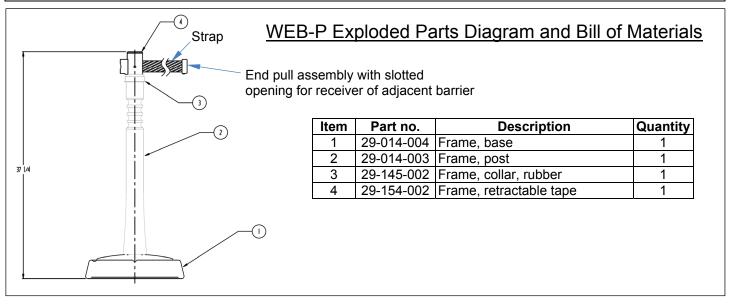

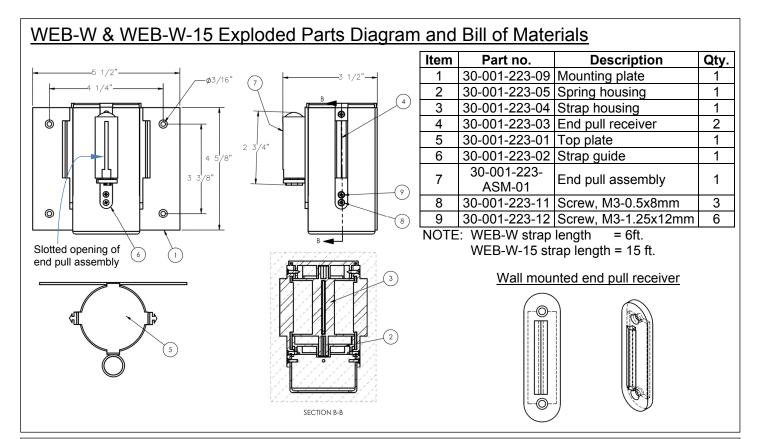

# Installing wall-mounted units (WEB-W and WEB-W-15)

There are 4 bolt/screw holes in the mounting plate (1). Your building engineer should select  $\frac{1}{8}$  hardware of appropriate length to fasten the mounting plate to a surface.

## Using the barrier system

Enclose an area with the barrier system by setting WEB-P units around the perimeter of the selected area. Extend the strap by pulling the end pull assembly (7). Attach the strap to an adjacent barrier by sliding the slotted opening over a receiver on the adjacent barrier. Straps from wall-mounted units (WEB-W and WEB-W-15) attach in the same manner.



## LIMITED WARRANTY

Vestil Manufacturing Corporation ("Vestil") warrants this product to be free of defects in material and workmanship during the warranty period. Our warranty obligation is to provide a replacement for a defective original part if the part is covered by the warranty, after we receive a proper request from the warrantee (you) for warranty service.

#### Who may request service?

Only a warrantee may request service. You are a warrantee if you purchased the product from Vestil or from an authorized distributor AND Vestil has been fully paid.

#### What is an "original part"?

An original part is a part used to make the product as shipped to the warrantee.

#### What is a "proper request"?

A request for warranty service is proper if Vestil receives: 1) a photocopy of the Customer Invoice that displays the shipping date; AND 2) a written request for warranty service including your name and phone number. Send requests by any of the following methods:

<u>Mail</u>	<u>Fax</u>	<u>Email</u>
Vestil Manufacturing Corporation	(260) 665-1339	sales@vestil.com
2999 North Wayne Street, PO Box 507	Phone	
Angola, IN 46703	(260) 665-7586	

In the written request, list the parts believed to be defective and include the address where replacements should be delivered.

#### What is covered under the warranty?

After Vestil receives your request for warranty service, an authorized representative will contact you to determine whether your claim is covered by the warranty. Before providing warranty service, Vestil may require you to send the entire product, or just the defective part or parts, to its facility in Angola, IN. The warranty covers defects in the following original dynamic components: motors, hydraulic pumps, electronic controllers, switches and cylinders. It also covers defects in *original* parts that wear under normal usage conditions ("wearing parts"): bearings, hoses, wheels, seals, brushes, batteries, and the battery charger.

#### How long is the warranty period?

The warranty period for original components is 30 DAYS. The warranty period begins on the date when Vestil ships the product to the warrantee. If the product was purchased from an authorized distributor, the period begins when the distributor ships the product. Vestil may extend the warranty period for products shipped from authorized distributors by up to 30 days to account for shipping time.

#### If a defective part is covered by the warranty, what will Vestil do to correct the problem?

Vestil will provide an appropriate replacement for any covered part. An authorized representative of Vestil will contact you to discuss your claim.

#### What is not covered by the warranty?

1. Labor;

2. Freight:

3. Occurrence of any of the following, which automatically voids the warranty:

- Product misuse;
- Negligent operation or repair;
- Corrosion or use in corrosive environments;
- Inadequate or improper maintenance;
- Damage sustained during shipping;
- Collisions or other incidental contacts causing damage to the product;

Unauthorized modifications: DO NOT modify the product IN ANY WAY without first receiving written • authorization from Vestil. Modification(s) might make the product unsafe to use or might cause excessive and/or abnormal wear.

#### Do any other warranties apply to the product?

Vestil Manufacturing Corp. makes no other express warranties. All implied warranties are disclaimed to the extent allowed by law. Any implied warranty not disclaimed is limited in scope to the terms of this Limited Warranty.

